

HYPE™

# SMART WATCH



Operation Manual  
HY-TTCM

Thank you for purchasing the Hype Smart Watch. Please read all instructions carefully before using and retain this manual for future use and reference.

## **PACKAGE CONTENTS**

- Smart Watch with Built-in Camera
- USB Charging Cable
- Operation Manual

## **KEY FEATURES**

- 0.3 MP Built-in Camera
- Play music wirelessly
- Media shortcut controls
- Rechargeable lithium-ion battery
- Built-in microphone and speaker

## **SAFETY INSTRUCTIONS**

Keep the unit away from heat sources, direct sunlight, humidity, water and any other liquids.

Do not operate the unit if it has been exposed to water, moisture or any other liquids to prevent against electric shock, explosion and/or injury to yourself and damage to the unit.

Do not use the unit if it has been dropped or damaged in any way.

Repairs to electrical equipment should only be performed by a qualified electrician. Improper repairs may place the user at serious risk.

Do not puncture or harm the exterior surface of the product in any way.

Keep the unit free from dust, lint, etc.

Do not use this unit for anything other than its intended use or purpose. Doing so may damage the device.

This product is not a toy. Keep out of reach of children.

Do not expose batteries, battery pack, or batteries to be installed to excessive heat, such as direct sunlight, or open flame.

# SMART WATCH FEATURES



## PRODUCT FEATURES

1. Touch Screen
2. Micro USB Charging Port
3. Return / Home Button
4. Camera
5. Adjustable Silicone Wrist Strap
6. Mico
7. Speaker

## HOME SCREEN

Once your smart watch turns on, it will show you the below home screen.



1. Bluetooth Symbol - Indicates watch is paired to a device.
2. Battery - Indicates remaining battery life on the Smart Watch.
3. Time - Shows current time
4. Date - Shows today's date
5. Dialer-Press Dialer Icon to dial numbers
6. Phone book-Press the Phonebook Icon to access your contacts list
7. Menu-Navigates to the Main Menu
8. Settings-Press the settings Icon to adjust settings
9. Mode

## STANDBY MODE



Press the Power Button once to put your Smart Watch in standby mode. The screen will go dark.

Press the Power Button a second time to display your watch and the time.

Touch to swipe left of your watch when the analog clock is showing to unlock your Smart Watch and return to your home screen.

# COMPATIBILITY

Please note, some features of your smart watch are **only available** to specific devices.

At the top of each section of the manual, compatibility is shown using the two icons below.



Only available for Android devices.



Available for Android and Apple devices.



Only available for Apple devices.

# INSERT A MEMORY CARD

To use the function of audio recording, camera, photo review and file review, please insert a memory card before using (Please note, a TF card is NOT included with this product).



Please use a screwdriver (not included) to remove the back case.



Please remove the battery .



Please prepare a memory card to insert.



Please insert the memory card into the card slot.




After you finished, please replace the battery, and use a screwdriver to replace the back case.

# BLUETOOTH PAIRING



Make sure your Smart Watch is turned on and fully charged.  
Make sure Bluetooth is enabled on your smart phone or tablet and your device is discoverable.

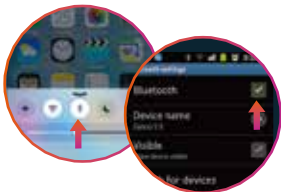

NOTE: Android users should download and run the "FunRun" App prior to pairing with Bluetooth. See "Settings / QR Code" for installation details before pairing.



Press the Bluetooth Icon on the menu to enter Bluetooth settings screen.



On


Press the word "Power" on your touch screen and ensure the icon on the right reads "On."

This will turn on your watch's Bluetooth.

# On


Press the word "Visibility" on your touch screen and ensure the icon on the right reads "On."

This will let your smart phone or tablet find your watch..

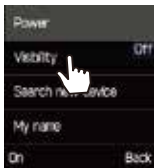

# HY




Press the phrase "My Name" on your touch screen to see the first few letters of your watch's pairing name.

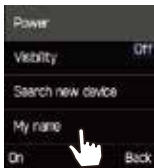

In the Bluetooth settings for your smart phone or tablet, search for nearby devices and find your watch.


It should appear as "HY-TTCM"  
Select it to begin pairing.

On your smart watch, press "Search new devices" and select your device on the next screen.

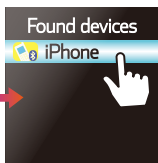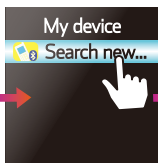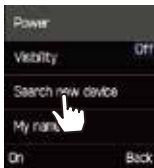



Your smart watch will send a pairing code to your phone. Make sure the codes match on your smart watch and on your device screen.

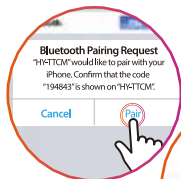


Press "Pair" from your smart phone or tablet.

Press "Yes" on your screen on the lower left to complete pairing.



NOTE: For Android users, after pairing with Bluetooth, your smart watch will ask you to sync date and time.

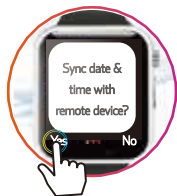


Press "Yes" on your screen on the lower left to complete pairing.

Your watch should confirm with "Success"

During a call, you can adjust call settings.

Press the "Settings" button and a scrolling pop-up screen will appear with the following options.

Scroll to down to see all 5 options. Their functions are listed below.

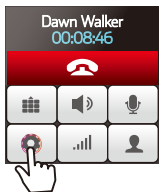

Hold - Places the call on hold, or takes a call off hold


DTMF - (Dual Tone Multi-frequency) Brings up the numeric keypad

Mute - Mutes / unmute the call

End single call - Ends the call



Switch audio path - Switches audio from your watch to smart phone

Press the "Volume" button to adjust the call volume.

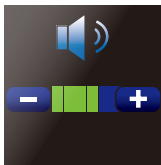

You can select the audio source for your call.



Pressing the "Watch Speaker On/Off" button will turn On or Off the watch speaker.

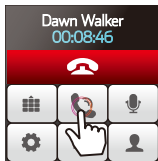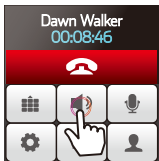

Turn ON watch speaker mode

Turn OFF watch speaker mode

During a call, you can mute/unmute a call by pressing the "Mute" button as shown below.

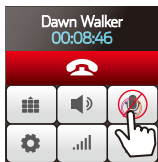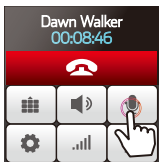

Mute call

Unmute call

Your smart phone will indicate it has begun dialing the selected contact.

Below is a diagram of available buttons and functions to use during a call.




1. Contact Name
2. Call Status / Duration
3. End Call
4. Numeric Keypad
5. Watch speaker On/Off
6. Mute
7. Settings
8. Volume
9. Contacts List

NOTE: The numeric keypad and settings are not available until after a call has been connected.

After the call is connected, you can access a numeric keypad. This is useful if you are on a call that requires you to make numeric selections.

Press the "Numeric Keypad" button and a keypad will appear. Press your desired selection or enter information.

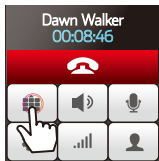




Contacts will be listed in alphabetical order based on first name.

Select any name on the list whose contact you want to view, or who you want to call.


You can scroll through your contacts by scrolling directly on the touch screen of your watch to find a specific contact.

In this example, Dawn is selected.

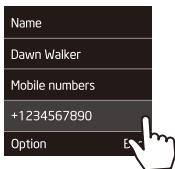

An example of a full contact is shown to the left.

To call your selected contact, select the mobile number.

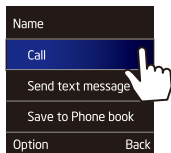

A pop-up window will appear. Select "Call."

Select "Option" to call, text message or save the contact to your phone book.


To cancel, press "Back" icon on your screen to go back to the contact page.

# PHONE BOOK



Press the Phonebook Icon on your home screen to access your contacts list.

Please note, in some cases, according to your mobile phone OS version, you may need to disconnect BT music before your smart watch can access your contacts list. If your smart watch asks you to disconnect, press the "OK" icon on the screen before proceeding.

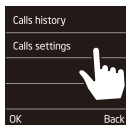

You are able to set your answer mode in call setting to "Any Key" or "Auto answer when in headset mode."




When you are finished checking your Call history, press the "Back" icon on the screen to return to your App menu screen.

# CALLS



Press the Calls Icon on your home screen to access your call history.



Your smart watch will sync with your mobile device to show you a list of Missed calls, Dialed calls, Received calls, or all full list of All calls.

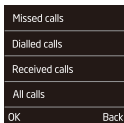

Select the list you would like to access. Each list will provide you a list of corresponding calls.

Select "Options" to view, call, text message or save the caller to your phone book.

Scroll down to read all caller info. Press the "Back" icon on the screen to return to your call history menu.

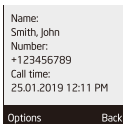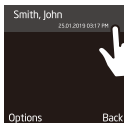



# DIALER



Press the Dialer Icon on your home screen to dial numbers from a phone keypad.


A numeric dial-pad will appear.

Enter the number you wish to dial including 1 + area code.

Press "Dial" icon on your screen to dial the number.



Please refer to the "Phonebook" section for details about making calls from your smart watch.

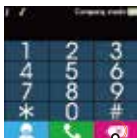

Press the "Delete" icon on the screen to delete any mis-entered numbers.

When you are done using the Dialer, press the "Home" button to return to your main menu.

Pairing is now complete. If you are unsuccessful, press the “Home” button of your smart watch to repeat the pairing process.

To restart the pairing process, you will first need to turn off “Visibility” and turn off Bluetooth “Power” first. Then turn Bluetooth off on your device and begin from the first step of this section.

To switch to another smart phone or tablet, return to the “My device” page and select your tablet or smart phone from that page.

## CALENDAR




Press the Calendar Icon on your home screen to access your calendar.



The Calendar will immediately bring you to today's date, highlighted in light blue.

Use the left and right arrows on the top of the calendar to scroll to the previous or the following months.


Press the "Contacts List" button to access or your contacts list.

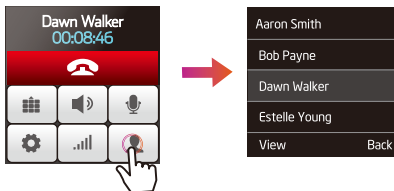

At any time while using any of these functions, if you want to return to your call, you can press the "Back" key on the watch frame to return to your call.

Press the "End Call" button the end a call.

Your watch will bring you back to your contact's info page.

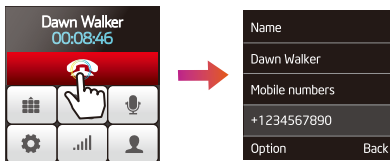

When you are done using your Phonebook, press the "Back" icon on the screen to return to your App menu screen.


# RECORDING




Please disconnect the BT music before using this function.




Press the Recording Icon on your home screen to do the recording from your smart watch, Please insert a memory card (not included) to use this function.

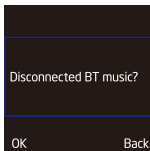

Press "New Record" on the left to create a new recording.

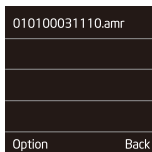

Press "List" to check your recording file. Press "Option", to play, rename, delete, or send the recording.

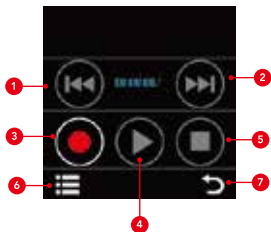

1. Previous Track
2. Next Track
3. Start/Pause
4. Play
5. Stop Recording
6. New Record
7. Back


When you are finished using your recording on your smart watch, press "Back" icon to return to your App menu screen.

## BT MUSIC




Press the BT music Icon on your home screen to play music from your smart watch.

Your smart watch will connect to your smart phone or tablet that is playing music. Once it is connected, you can control media from the screen below.

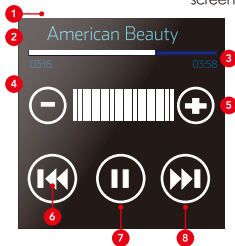


1. Track Name
2. Elapsed Time
3. Remaining Time
4. Lower Volume
5. Increase Volume
6. Previous Track
7. Play/Pause
8. Next Track

You are able to access your music list in you memory card by clicking "Local List". You will disconnect the BT music before using this function.

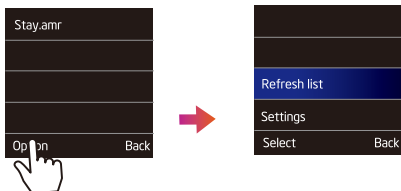

Press "Option" to play music or view details of your selected track. You can also refresh your music by pressing "Refresh" List.

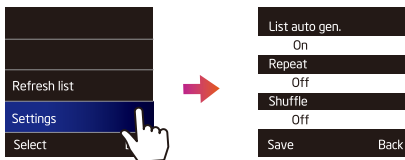

Press "Settings" to turn on/off "List auto gen." When auto generation is on, the watch will sync with your playlist on the TF card if you have made any changes on your TF card's playlist.

In Settings, you can also choose to "Shuffle" your playlist, or "Repeat" a single track. Press "Save" to exit the screen.



When you are finished using your BT music speaker on your smart watch, press the "Home" button to return to your App menu screen.

# CALCULATOR



Press the Calculator Icon on your home screen to access your calculator.

A numeric keypad will appear.  
Enter in your desired calculation and press the "=" button to calculate the result.



Press "Clear" to clear your entry.  
You can press "Back" to return to your App menu screen.



# CAMERA



Press the camera icon on your menu to access the camera of your watch. Please insert the memory card before using this function.






1. Zoom out
2. Zoom in
3. Shutter



You are able to take picture with the built-in camera.





You are able to set the camera, image and effect from "Options".

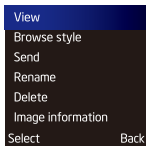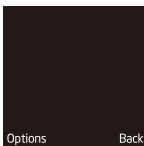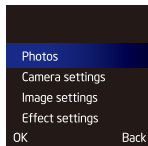



Select "Photos" to review the photos you have taken. You are able to view, change the browser style, send, rename, delete or check the info of the photo by selecting "Options".

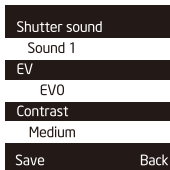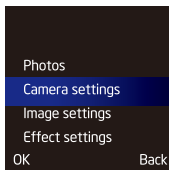

Select "Camera settings" to change the shutter sound, EV, contrast, anti-flicker, scene mode, white balance and delay timer. Press "Save" after you selected.

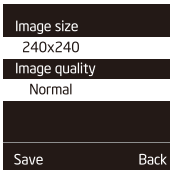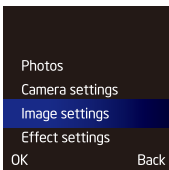

Select "Image settings" to change the image size and image quality. Press "Save" after you selected.

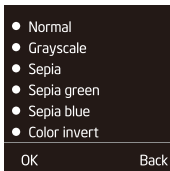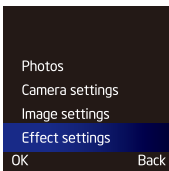

Select "Effect settings" to switch between filter options of Normal, grayscale, sepia, sepia green, sepia blue or color invert. Press "OK" after you selected your desired filter.



After you press the shutter icon, you will see a preview of the picture you took. You are able to select "send" or "delete" after you have taken your photo. The photo will save to your memory card.

Press "Back" on your screen to return to take another picture.




When you are done using the Camera shutter button, press the "Back" icon on your screen to return to your App menu screen.

# PHOTO



Press the album icon on your menu to access your album. Please insert a memory card before using this function.

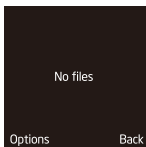


You are able to view the picture you took from you watch.  
You can view the picture by touching the picture. Press "Options", you are able to choose the browse style, send the picture by BT, rename the picture, delete the picture or check the info of the picture.

# SETTINGS





Press the Settings Icon on your home screen to adjust settings on your smart watch.

## SETTINGS Profiles

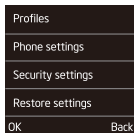

Press "Profile", then you are able to select a sound mode of how your watch should act when alerting you of notifications. Press "Options" icon to activate or customize your ringtone. After you set, press "select" to confirm. Or you can press "back" to return to the previous page.

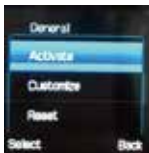
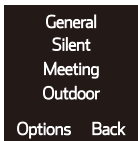


# PHONE SETTINGS


## Time/Date



Press "Phone settings" to set your phone.  
"Time and date" will allow you to set the time and date.

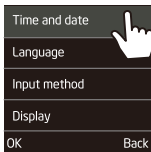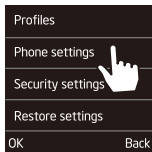

Press the "Back" key to return to the previous page.

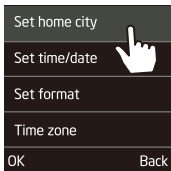


Select "Set home city" to view the list of cities.

Scroll through this list by swiping your finger upwards on your watch touch screen. Find your desired city, and press its name on the touch screen of your watch.


In the example below, "New York" is chosen.

Select "Date settings" to put in the current date.

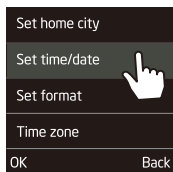

A dial will appear to let you indicate the current time and date. Press the field you wish to edit.

Press "Save" to confirm the date, press "Back" to exit without saving the date.

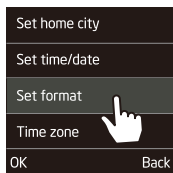


Select "Set format" to set your digital clock to show time in the standard 12-hour format, or the 24-hour military format.

Press the left or right arrows to cycle through "12" or "24." Press the "OK" icon to confirm your selection.

If you select the 24-hour time format, make sure your time is input in your watch as such under the "Set time/date" section.

Select "Time zone" to turn the automatic update during Daylight Savings Time on or off.

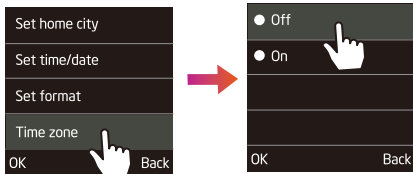

When Update options are set and shown correctly, press the "OK" icon to confirm the information.

Keep pressing the "Back" key until you return to your "Settings" main screen.







Select "Language" to choose the language shown on your smart watch. The default setting is "English."

Scroll through this list by swiping your finger upwards on your watch touch screen. Find your desired language, and press its name on the touch screen of your watch.


In the example below, "English" is chosen.

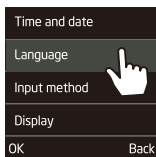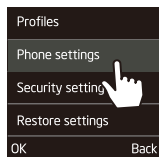



When your selection is confirmed, your watch will show you "OK" and take you back to "Settings" main screen.



Select "input method" to adjust your preferences for input method .

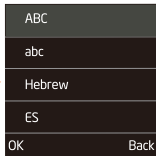


In the example, the capital form has been selected.

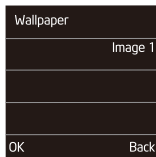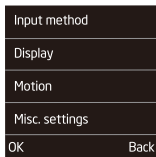


Scroll down to adjust the display wallpaper, motion setting and misc settings.



Select "Display" to change the wallpaper of your screen.

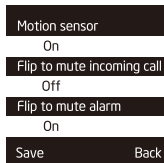


Select "Motion" to edit the setting of your motion sensor, flip to mute incoming call and alarm.

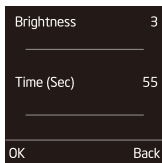

Select "Misc. settings" to edit the brightness and time of your LCD backlight.

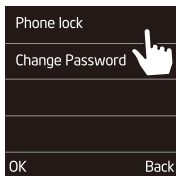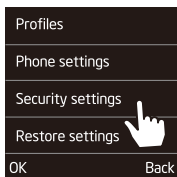

Press "Security setting" to activate the watch lock. You are able to lock your watch by pressing the "Phone lock".

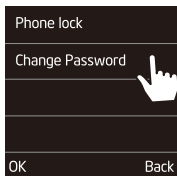


Press "Change Password" to change your watch password. The default password is "1122".

## PHONE SETTINGS Restore Settings



"Restore settings" will allow you to reset all settings on your phone and clear all Bluetooth devices and personal information. It is best to use this feature if you no longer want your smart watch.

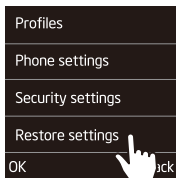

Press the "OK" icon to begin the restore process.

Your watch should confirm with "Restore processing."

The smart watch will restart and the settings will be restored to the default settings. It will leave you at the home screen.

## REMOTE SHUTTER



Press the BT notice Icon on your Menu to set and customize your notifications.

Please Install  
The APP In  
Remote Device

You are able to remote your phone shutter in this function.

This App can only be used on smart watches paired with Android devices.

Before using, please download the "FunRun" App. See "QR code" on page 43 of the menu for installation detail



The BT camera will connect to your Android device's built-in camera and work as a remote shutter button.

You can see a low-resolution preview of your phone's camera. When switching from portrait to landscape, give your smart watch a couple seconds to sync the image preview before taking a photo.

## FILES



Press the **File** icon on your menu to check the file of your memory card. Please insert a memory card before using this function.

You are able to view the file of your memory card.



When you have finished reviewing files on your watch, press the "Back" icon to return to your App menu screen.

Audio	
My music	
Photos	
Option	Back

You are able to check the audio, music and photos in your memory card. Press "Option" to open, create new folder, rename or delete files.

# FIND MY WATCH




Press the Anti-Lost Icon on your home screen to use the watch and phone tracking feature.

Some features of this App can only be used on smart watches paired with devices. Please see each sub-section for compatibility before proceeding.



Press on "Anti-Lost" to set a notification for when your Smart Watch is out of range of your Apple or smart phone or tablet.

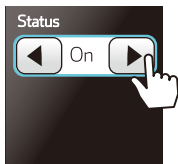

You have the option to turn this alert On or Off.

Use the left and right arrows to set this alert.



Press the "Save" icon to set your alert.

If you are wearing your Smart Watch and move further than 33 ft (10m) away from your paired device, your smart watch will alert you with your set Anti-lost alert.



Press the "Save" icon to keep sounding the Anti-lost alert until you find your phone.



Press the "Save" icon to stop the Anti-lost alert because you have located your phone.



# BT NOTICE



Press the BT notice Icon on your Menu to set and customize your notifications.


This App can only be used on smart watches paired with Android devices.

Please Install  
The APP In  
Remote Device

Before using, please download the "FunRun" App. See "QR code" on page 43 of the manual for installation details.

Push notifications set on your phone will appear as a short preview on your smart watch. An incoming message is shown as an example below.

Scroll down on your touch screen to see time and date of notification. Press the "Scroll" button on your watch frame to view additional notifications if you have more than one.

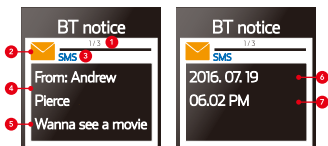

1. Notification #/ Total # of Notifications
2. Messaging App Icon
3. Messaging App Name
4. Contact Name

5. Message Preview
6. Notification Date
7. Notification Time

BT Notice will send push notifications to your smart watch from your Android phone from all compatible Apps on your Android that are set for push notifications.

Some compatible BT notice Apps are listed below:

 SMS Messaging

 What's App

 Message +

 Gmail

NOTE: Open source App compatibility with "BT notice" may vary based on software design and are subject to change without notice.

Hype™ is not responsible for software updates and software compatibility made by third party software developers on the Android platform or on the Play Store.




When you are reading your Notifications, press the "Back" icon to return to your App menu screen.

# SEDDENTARY REMINDER



Press the Sedentary Reminder icon on your home screen to set a reminder not to stay seated for too long.

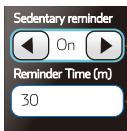

Use the left and right arrow keys to turn the reminder on or off.

Press into the time display to set the time of your reminder.

A dial will appear to let you indicate the number of minutes you want to wait until your smart watch's reminder rings.

Press the plus or minus symbol to increase or decrease the number.

Press "OK" to confirm the time, press "Back" to exit without saving the time.



Press the "OK" icon to set your reminder.

Press "Save" from the pop-up menu, or "Back" to cancel your reminder.

## QR CODE



"Quick Response Code" will display the Setup QR code.



Please note, this QR code is to be used for quick setup and pairing of your smart watch with your smart phone or tablet.

This feature is only available for Android devices.

Using your Android smart phone, scan the QR code from your smart watch, open and install the "FunRun" App in order to quick sync your messages, push notifications, and date and time.

Install the downloaded App and have it ready and running on your Android device before Bluetooth pairing.


# SLEEP TIMER



Press the Sleep Timer icon on your home screen to track your sleep.

Note: You may need to turn off the sedentary reminder before using this function.

A timer will appear. Press "Start" when you are ready to sleep.

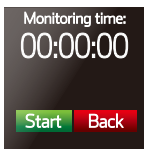

You can press "Back" if you have not started the timer, and you want to return to your App menu screen.



You can also "Pause" and "Resume" the timer.

If you want to reset the Sleep Timer, press the "Reset" button.



If you have reset your Sleep Timer, you can press "Back" to return to your App menu screen.



When you are finished using your Sleep Timer, press the "Stop" button to stop the timer. The timer will display the amount of time you have slept.

Press the "Home" button to return to your App menu screen.

# MESSAGES



Press the Messages Icon on your home screen to view sent and received messages.


This App can only be used on smart watches paired with Android devices.


Please Install  
The APP In  
Remote Device

Before using, please download the "FunRun" App. See "QR code" on page 43 of the menu for installation details.

Your smart watch will sync with SMS Messaging on our phone to show your Inbox and Sent Messages.


Select the list you would like to access. Scroll down to access the full list. Select an entry on the list to see message details and message body.

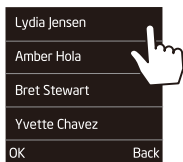

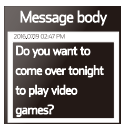

The date and time of the message will appear at the top of the message body.

Scroll down to read the full message.

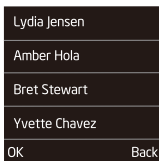

When you're done reading your messages, press the "Back" icon to return to your **Inbox** or **Sent Messages** folder.

Press the "Back" button again to return to your messaging folder.




When you are reading your Messages, press the "Back" icon to return to your App menu screen.



# ALARM




Press the **Alarm Icon** on your home screen to set an alarm. Your smart watch can set up to 5 customizable alarms.

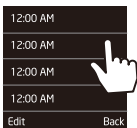

Select any **alarm** time without a check mark next to it to customize **alarm** settings.

**Scroll** down on the touch screen of the watch to access the 5th alarm.

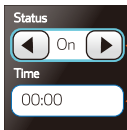

Use the **left** and **right** arrow keys to turn the **alarm** on or off.

Press into the time display to set the time of your **alarm**.

A dial will appear to let you indicate the current date. Press the field you wish to edit .

Press "OK" to confirm you alarm time or press "Back" to exit without saving the time.

Scroll down on the touch screen of the watch to continue customizing alarm settings.




Select the box under "Repeat" to choose the days you want your alarm to ring.




"Once" will have your alarm ring only once your watch clock reaches the set alarm time.



"Everyday" will have your alarm ring daily once your watch clock reaches the set alarm time.

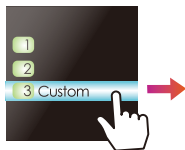

"Custom" allows you to choose which days of the week you want your alarm to ring.

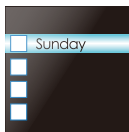


Select the day of the week you would like your alarm to ring.



A pop-up window will appear to allow you to select "On" or "Off."

Once you have made your selection, press "Done."



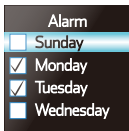

A check mark will appear next to the days of the week you have set your alarm to ring.

Scroll down on this screen to access and customize all 7 days of the week.


Press the "Back" icon return to your Alarm menu. Scroll down on the touch screen of the watch to continue customizing alarm settings.

Select the box under "Alarm tone" to choose your alarm noise. These Alarm tones will match your 5 preset ringtone choices. Scroll down to access the 5th ringtone.



Press the "OK" icon of your smart watch once you have confirmed your alarm details.

Your alarm will appear in the list of alarms with a check mark next to it, indicating that details have been set and the alarm is on.

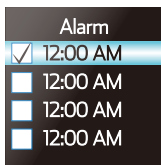

To set additional alarms, select another alarm time from the list.

Follow all steps to set each alarm as shown in this section.

When you have finished setting all desired alarms, press the "Home" button to return to the App menu screen.



Press the "Back" icon to return to your Alarm menu. Scroll down on the touch screen of the watch to continue customizing alarm settings.


Select the box under "Alarm tone" to choose your alarm noise. These Alarm tones will match your 5 preset ringtone choices. Scroll down to access the 5th ringtone.

# PEDOMETER



Press the Pedometer Icon on your home screen to access your pedometer. The built-in sensor on your smart watch will track your movements and count your steps.


Note: You may need to turn off the sedentary reminder before using this function.

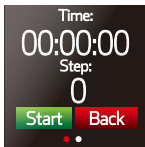

Your Pedometer has a built-in timer and step counter.

Press "Start" to start the timer and the step counter.

You can press "Back" if you have not started the timer, and you want to return to your App menu screen.

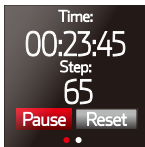

You have the option to "Pause," "Resume" and "Reset" your timer on this screen as well.

Swipe right on your screen to check your summary page on the second screen. The red dot on the bottom of your Pedometer App will show you which screen you are on.

Your summary page will show the below information:



A screenshot of the Pedometer App's summary page. The background is black with white text. The data shown is: Step: 0, Time: 0 m 0 S, Fat: 0.000000g, Heat: 0.000000, Speed: 0.000000, and Mileage: 0.000000. At the bottom, there are two dots, the right one of which is red, indicating the current screen.

Step: Total number of steps  
Time: Duration of timer  
Fat: Grams of fat burned  
Heat: Heat index advisor (°F)  
Speed: Walking speed  
Mileage: Total traveled distance



If you have reset your timer and step counter, press "Back" to return to your App menu screen.



When you are finished using your Pedometer, press the "OK" icon to return to your App menu screen.

## BATTERY CARE

The lithium-ion battery is built into the device. Do not disassemble the device to remove the battery or attempt to separate it from the device.

- When charging the device, please use the enclosed USB charging cable or otherwise ensure that the battery charging conditions are met.
- Do not connect or attach the device or the battery to a power supply plug or directly to a car's cigarette lighter.
- Do not place the device or batteries near a fire, or into direct sunlight. Heating the device and/or the battery can cause additional heating, breaking, or ignition of the battery inside the device.
- Do not continue charging the battery if it does not recharge within the specified charging time. Doing so may cause the battery to become hot, rupture, or ignite.

To preserve natural resources, please recycle or dispose of batteries properly. This product contains lithium-ion batteries. Local, state, or federal laws may prohibit disposal of lithium-ion batteries in ordinary trash. Consult your local waste authority for information regarding available recycling and/or disposal options.

- Do not attempt to modify, change, or replace your battery.
- Do not use your device if the battery begins to emit odor, overheats, or begins to leak.
- Do not touch any leaking materials or breathe fumes emitted.
- Do not allow children and animals to touch an exposed battery.
- The battery contains dangerous substances, do not open the battery, or insert anything into an exposed battery.

- Please **only** use the charger provided by Hype®.
- Do not attempt to charge the device if the battery has discharge or emits any substances. In that case, **immediately** distance yourself from the battery in case of fire or explosion.
- Lithium-ion batteries are considered to be hazardous materials. Please **follow all** local, state and federal laws in regards to recycling, handling and disposing of Lithium-ion batteries.

## SPECIFICATIONS

Bluetooth:	Version 3.0
Display:	1.54 Inch LCD touch screen
Resolution:	240x240 Pixels
Charge Time:	Up to 2 hour
Battery:	Built-in 230 mAh Lithium-ion Battery
Talk Time:	Up to 1 hour
Standby Time:	Up to 120 Hours
Charging Interface:	Micro USB
Weight:	0.081 lbs. / 0.037 kg.
Camera:	Built-in 0.3MP camera
BT ID:	D031981
FCC ID:	2AANZTCM



# FCC STATEMENT

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Please note that changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

## FCC INSTRUCTIONS FOR A CLASS B DIGITAL DEVICE OR PERIPHERAL

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

THIS CLASS B DIGITAL APPARATUS COMPLIES WITH CANADIAN ICES-003.